

XR500 Arming and Disarming Quick Reference

Disarming the Alarm System


1. Press **CMD** until **ARM DISARM** displays.
2. Select **DISARM**, enter your user code and press **CMD**.
3. At **ALL? NO YES**, if you select **NO**, the keypad displays the name of each area followed by **NO YES**. Select **YES** or **NO** to disarm area(s) of your choice.

Arming the Alarm System

1. Press **CMD** until **ARM DISARM** displays.
2. Select **ARM**, enter your user code if a closing code is required and press **CMD**.
3. At **ALL? NO YES**, if you select **NO**, the keypad displays the name of each area followed by **NO YES**. Select **YES** or **NO** to arm the area(s) of your choice.
4. **SYSTEM ON** or **ALL SYSTEM ON** displays.


Note: **SYSTEM ON** means at least one area in the system is armed.

ALL SYSTEM ON means all areas in the system are armed. The keypad begins counting down the exit time.

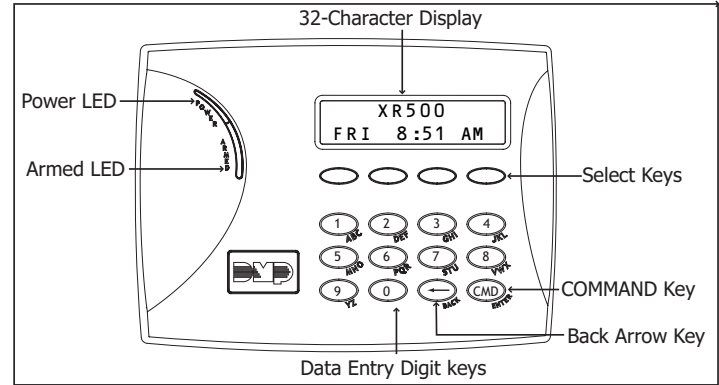


Keypad Layout and Function Keys

Disarming Steps

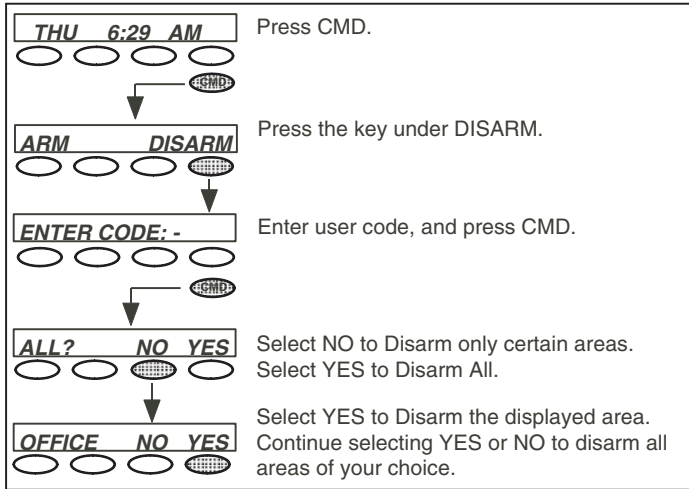

Arming Steps

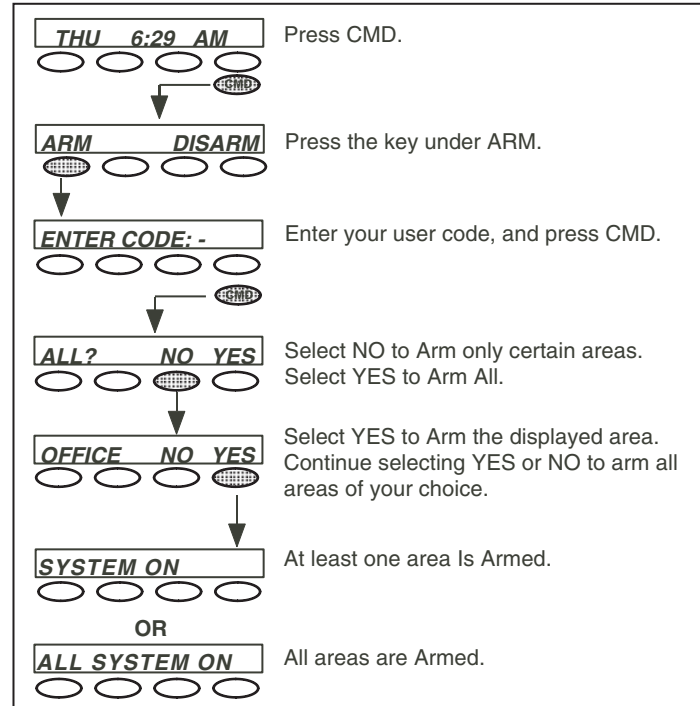

Digital Monitoring Products

800-641-4282

www.dmp.com

Made in the USA

INTRUSION • FIRE • ACCESS • NETWORKS

2500 North Partnership Boulevard

Springfield, Missouri 65803-8877

LT-0895 (8/06) © 2006 Digital Monitoring Products, Inc.

